



1. Product information

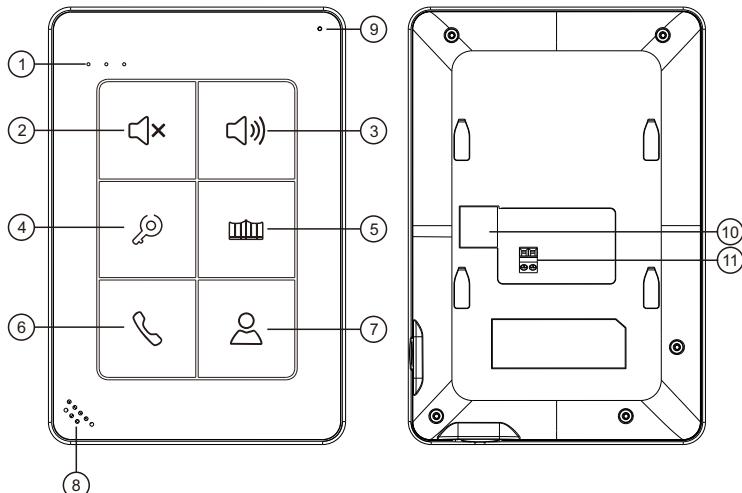


No.	Name	Description
1	Indicator	Status indicator light
2	DND button	<p>1. When in standby mode, short press to turn on/off the "Do Not Disturb" mode.</p> <p>2. During a call, short press to mute/unmute the microphone.</p> <p>3. When in standby mode, long press for 2 seconds to turn on/off the touch button sound.</p>
3	Volume control	<p>1. When in standby mode, short press to adjust the ringtone volume.</p> <p>2. During a call, adjust the call volume.</p> <p>3. When in standby mode, long press for 2 seconds to change the ringtone type.</p>
4	Unlock button	Unlock door
5	Gate unlock button	Unlock gate
6	Answer button	<p>1. When receiving a call, short press to answer.</p> <p>2. During a call, short press to hang up.</p> <p>3. When in standby mode, short press to dial a fixed number.</p> <p>4. During a call, long press for 2 seconds to transfer the incoming call to another indoor monitor in the same family.</p> <p>5. When in standby mode, long press for 2 seconds to call the elevator.</p>
7	Management center button	When in standby mode, short press to call the management center.
8	Speaker	Loudspeaker
9	MIC	Microphone
10	Ethernet port	Network interface
11	DC power supply	DC12-15V, 4W

2. Wiring diagram


2.1. For villa - UTP cable

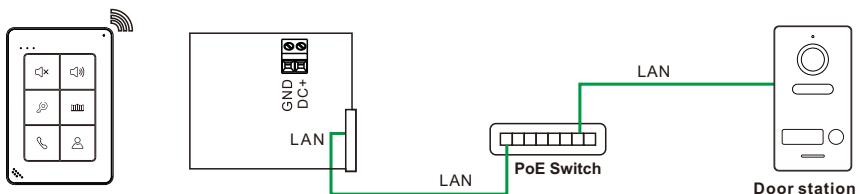

2.2. For villa - WiFi

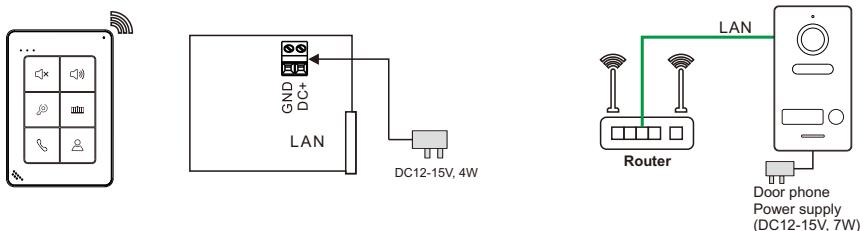

2.3. For apartment

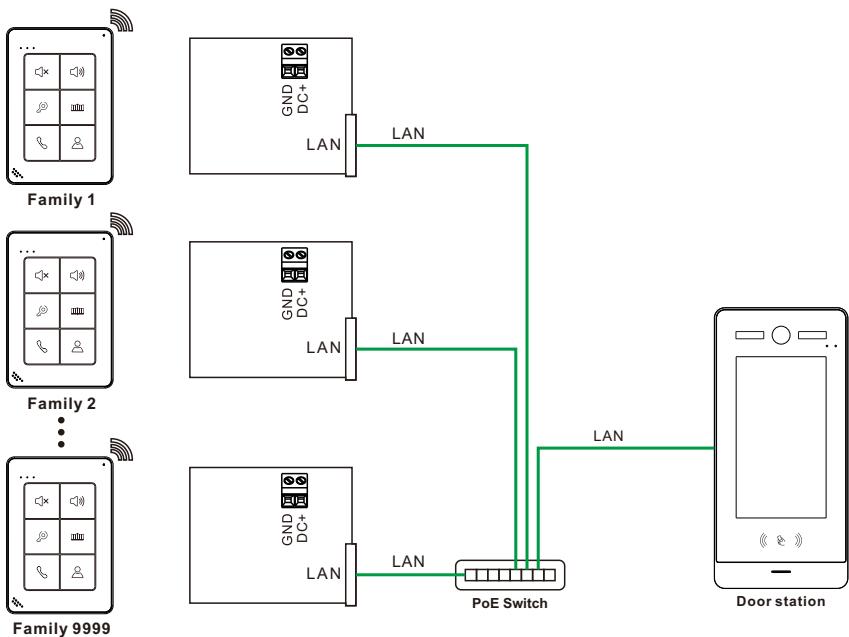

Note:

1. For one family, the maximum number of outdoor panel can be connected is 8, and the maximum number of indoor monitor can be connected is 10.
2. Power supply: POE IEEE 802.3AF / DC12-15V,4W (Optional)

3. Incoming call answer / Call transfer

1. When a visitor presses door station, all the indoor monitors in this house will chime simultaneously, the green light will flash.
2. Press  button to talk with the visitor, long press  button to transfer the call to other monitors, press  button once more before another monitor take the call, to talk with the visitor again. Press  button again to hang up the call. The monitor will return to standby state if no one answers after chime time ends.
3. At ringing or answering state, Press  button to unlock the door , press  button to unlock the gate.

Note:

At the answering or intercom between monitors, press  button, the microphone will be mute, and the red light will flash, press  button again the microphone return to normal.

4. Intercom between apartments / extension monitors

At standby state, press  button to call a fixed number, press  button to call the management center.

Note:

Please set up the call fixed number and call management center on the web first.

5. Ringtone adjustment

At standby state, press  button to adjust the ringtone volume. long press  button change the ringtone type.

6. Indicator light statuses

White light steady on	standby mode
Red light steady on	Do Not Disturb mode
Green light flashing	Calling
Green light steady on	During a call
Red light flashing	Microphone muted during a call
White light flashing	Offline network

7. Configure the Indoor Monitor on the Web Interface

7.1 Login Web

To configure a indoor monitor remotely through the web interface, you must connect to the device via an internet browser on a PC. The indoor monitor and PC from which you plan to access the device must be connected to the same network segment.


In the Internet browser, you must enter the indoor monitor IP address into the address input line. To find the device and figure out its IP address you can use **Net Floor Tool** (that shows all connected to the network devices).

After entering an IP address in the browser, a window to type a login and password will appear.

Note:

Username: admin


Default password: admin123

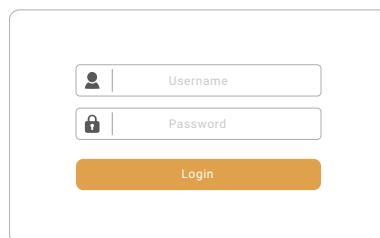

7.2 Device Settings

7.2.1 Basic Settings

Click **Device Settings** and **Basic** to enter the basic settings interface. You can configure the **Do Not Disturb**, **Touch Button Sound**, **Call Fixed Number**, and **Call Management Center** of the indoor monitor.

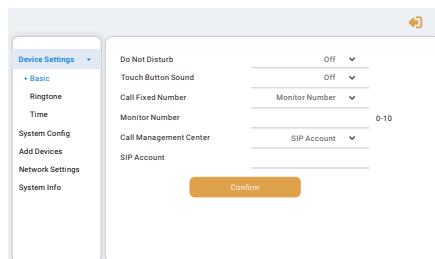

No.	Setting Item	Selection	Description
1	Do Not Disturb		Default is Off.
2	Touch Button Sound	ON	Turn on touch button sound.
		Off	Turn off touch button sound. Default is Off.
3	Call Fixed Number	Off	Turn off call fixed number.
		Monitor Number	Call other monitor in the same family, enter 0 to call all monitors in the same family, and enter 1-10 to call the corresponding monitors.
		Apartment Number	Call the monitor of the same unit, enter the apartment number to call the corresponding monitor.
		SIP Account	Call the SIP account, enter the username of the SIP account.
		IP Address	Call IP address, enter the IP address of the called device. If the port number of the called device is not 5060, you need to add the port number after the IP address, for example: 192.168.0.101:5062
4	Call Management Center	Off	Turn off call management center.
		Internal	Call the internal management center.
		SIP Account	Call the SIP account, enter the username of the SIP account.
		IP Address	Call IP address, enter the IP address of the called device. If the port number of the called device is not 5060, you need to add the port number after the IP address, for example: 192.168.0.101:5062

Note:

1. After setting the fixed number, click  to call.


2. After setting the management center number, click  to call.

7.3 System Config

Click **System Config** to enter the system configuration interface. You can configure the **Type**, **Apartment Number**, **Monitor Number** of the indoor monitor.

7.3.1 Type-Villa

When the indoor monitor is connected to a villa system, set the **Type** to **Villa**. You can configure the **Apartment Number** and **Monitor Number** of the indoor monitor.

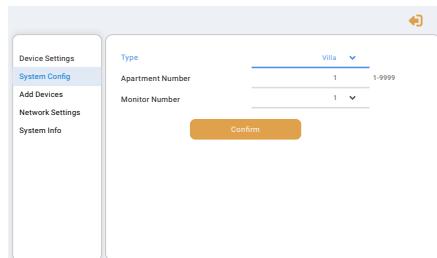

Notes:


- (1) The **Monitor Number** of the master monitor must be set to 1, and the extensions can be set to 2/3/4..., but two indoor monitors cannot set the same number.
- (2) In same family, set same **Apartment Number** (the **Apartment Number** can be set from 1 to 9999)

Eg: Set master monitor to **Apartment Number 1 / Monitor Number 1** and extension to **Apartment Number 1 / Monitor Number 2**.

Only the master monitor needs to add the door station, and the extensions (**monitor Number 2/3/4...**) will automatically add the door station.

7.3.2 Type-Apartment

When the indoor monitor is connected to an apartment system, set the **Type** to **Apartment**. Please follow the manual of Multi- Apartment Outdoor Station to set the **Unit number**, **Floor Number** and **Apartment Number** of the indoor monitor.

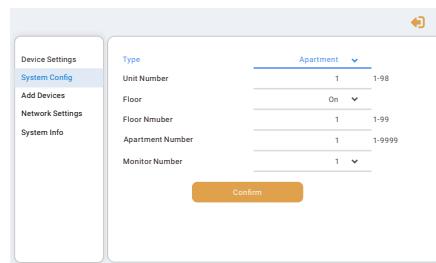

7.4 Add Devices

7.4.1 Add the door station automatically

When the indoor monitor and the door station are connected as the wiring diagram, the single-family door station will be automatically configured (this will happen 1-2 minutes after power is applied).

Note: If after 1-2 minutes the connection has not occurred (you cannot make a call) - check if the connection is correct, do a **RESET** on the door station and the indoor monitor to reconnect.

7.4.2 Add the door station manually


You can follow the steps below to complete the access to the single-family door station.

Step 1: Click **Add Devices** to enter the add devices interface of the indoor monitor web page.


Step 2: Click to enter add devices interface, as shown in pic. 1.

Step 3: Click on the door station to be added to the device list, as shown in pic. 2. The door station can be successfully added to the indoor monitor.

Step 4: After successfully adding the door station, the device address will be displayed in the list on the right, as shown in pic. 1.

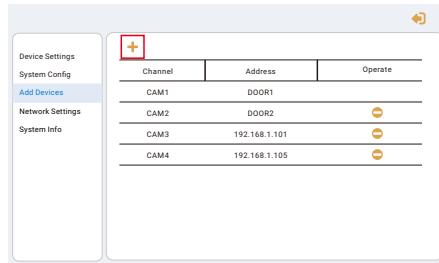

Picture 1

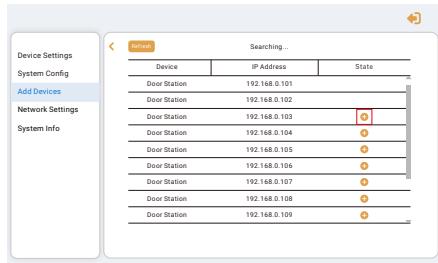

Picture 2


7.4.3 Unbind door station from indoor monitor

Click **Add Devices** to enter the add devices interface of the indoor monitor web page.

→ Click **–** which followed IP address of door station on the list to unbind corresponding devices as your needs.

NOTE:

1. Unbind the door station or reset the door station to resume the factory default password.
2. If you remove the single-family door station unit without turning off the power, the door station will automatically reconnect to the indoor monitor when it restarts.

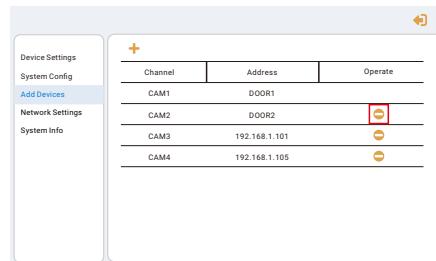


7.5 Network setting


7.5.1 Wi-Fi

Click **Wi-Fi** to enter Wi-Fi setting interface. You can connect to the network via Wi-Fi.

After turning on Wi-Fi, the Wi-Fi list will pop up. Click the Wi-Fi name in the list and enter the password to connect to Wi-Fi.

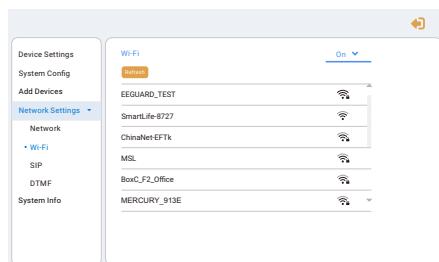


Picture 1

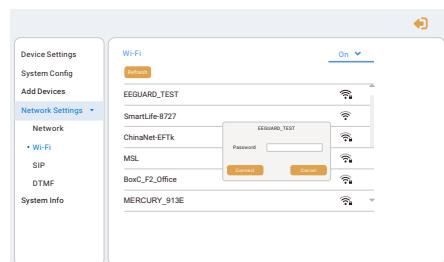

Picture 2

7.6 System Info

Click **System info** to enter system information setting interface.

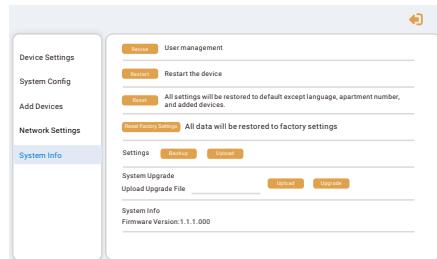

No.	Setting Item	Description
1	Revise	Modify login password of indoor monitor.
2	Restart	Restart the indoor monitor.
3	Reset	All other settings restore to default, except language, apartment number, and added devices.
4	Reset Factory Setting	All data restore to default.
5	Settings	Device settings parameters Backup and Upload .
6	System Upgrade	Upgrade firmware of indoor monitor.
7	System Info	Firmware version of indoor monitor.

8. Installation guide

1. Connect wires according to relevant wiring diagram and check whether the power supply meet requirements.
2. Ensure devices is powered off before installation finished.
3. Determine the monitor installation position: suggest installation height is 1.5~1.6m.
4. Install the bracket on the wall. To remove the wall bracket from the monitor - slide the bracket upwards.
5. Fix the indoor monitor onto the bracket. To put the monitor on the bracket - insert the guides and slide the monitor down.
6. Turn on the power after complete installation.

