

OPERATION INSTRUCTION


2-Wire Audio Intercom System

Indoor Monitor

Outdoor Units

User Manual

INDOOR MONITOR APPEARANCE INTRODUCTION

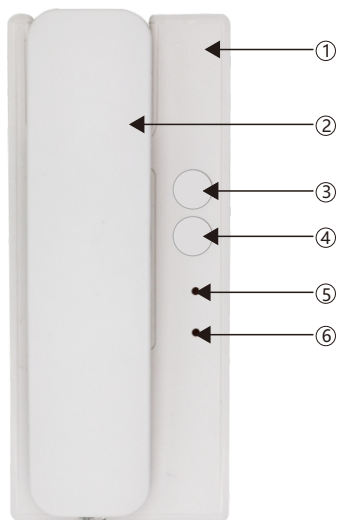

1	Base
2	Microphone
3	Unlock button
4	Call transfer button
5	Power LED
6	Intercom LED

INDOOR MONITOR OPERATION INSTRUCTION

1. Intercom function: When call from outdoor station, indoor monitor will ring, answer the call can intercom with outdoor station, the green LED is ON; Hang up the handset, restore to standby mode, the green LED is OFF.
2. Unlock function: When intercom with outdoor station, press unlock button to unlock the door.
3. Call transfer function: When intercom with outdoor station, press call transfer button, hang up handset cant transfer the call to other indoor monitors.
4. Internal call function: When in standby mode, pick up the handset, press call transfer button, can call other indoor monitors.

Product parameter:



- Power supply: External switching power supply(DC15)
- Working current: <150mA
- Working Temp: -40°C ~+60°C

How to setup the extension handset:


The back of the handset switch default dialed to the “1” position, means the handset as the master, dialing switch to the “on” position means the handset as an extension.

Note: when connecting extension, the master handset should switch to “1”, the extension handset should switch to “on”.

WIRING DIAGRAM

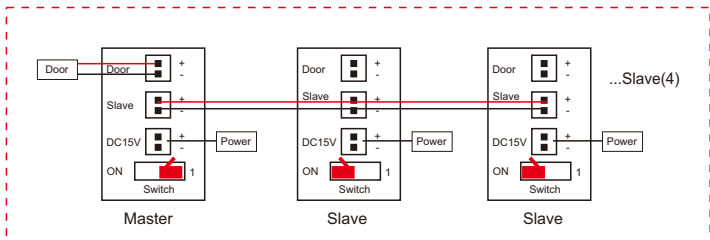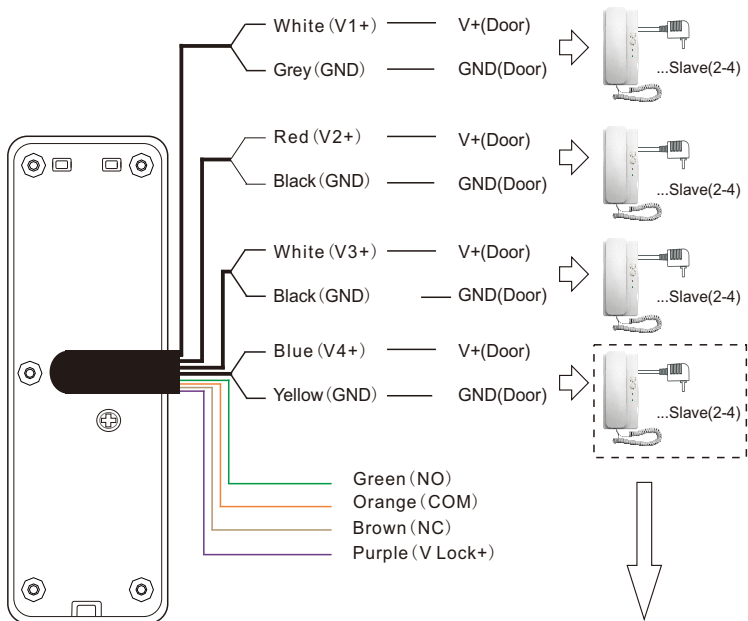

HOW TO INSTALL THE INDOOR UNIT

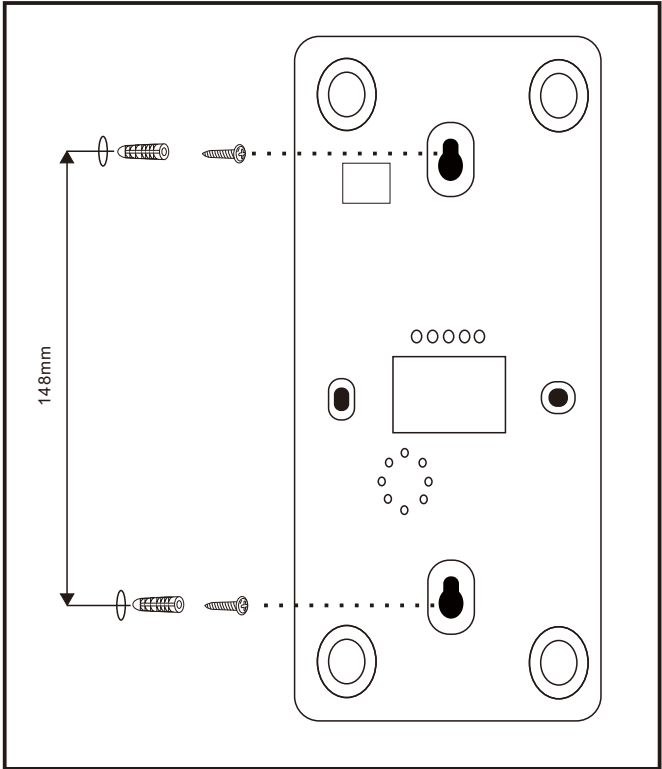


INSTALL THE INDOOR UNIT





Note:

- Please be far from the devices with intense radiation: TV, DVR, etc.
- Do not disassemble privately to avoid the electric shock.
- Do not drop, shake or knock the device, otherwise will damage the elements.
- Choose the best position to install, the horizontal view is 150cm.
- Please power down before installation.
- Keep at a distance of more than 30cm with AC power to avoid interference.
- Away from the water, magnetic field and chemicals.





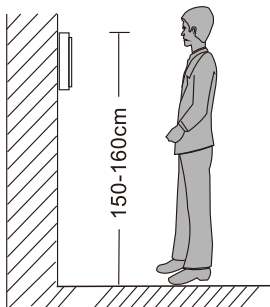


INDOOR MONITOR ACCESSORIES

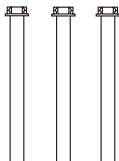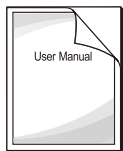

- Access unit ----- 1PCS
- Plastic Anchors ----- 2PCS
- Screws ----- 2PCS
- User manual ----- 1PCS
- 2 Pin line ----- 3PCS



OUTDOOR UNITS APPEARANCE INTRODUCTION

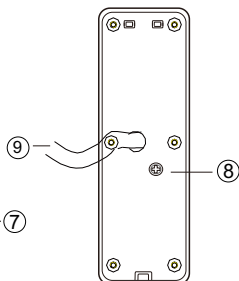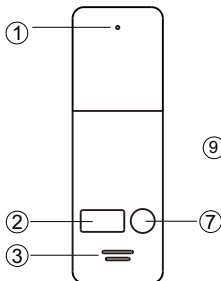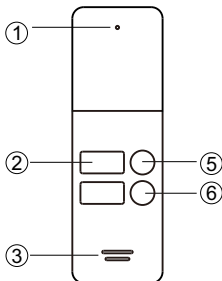
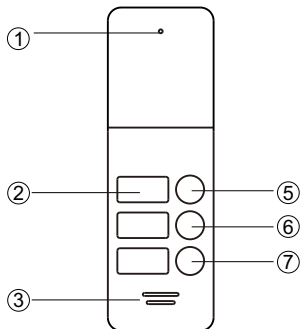
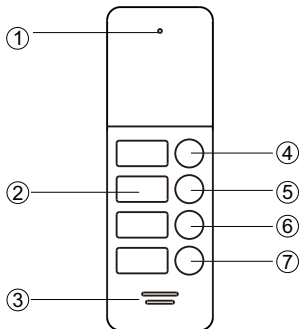


Notice: Long press button 5s switch AHD/CVBS signal.

1	Microphone	4	Call button(Indoor1)	7	Call button(Indoor4)
2	Name Tag	5	Call button(Indoor2)	8	Volume regulator
3	Speaker	6	Call button(Indoor3)	9	System port

OUTDOOR UNITS WIRING DIAGRAM

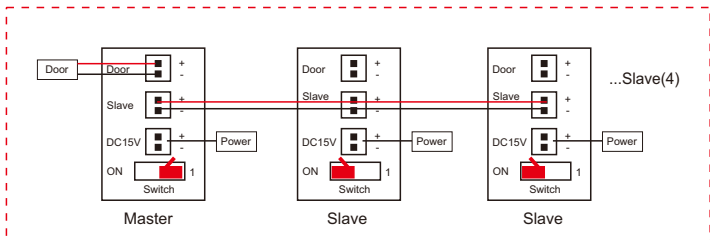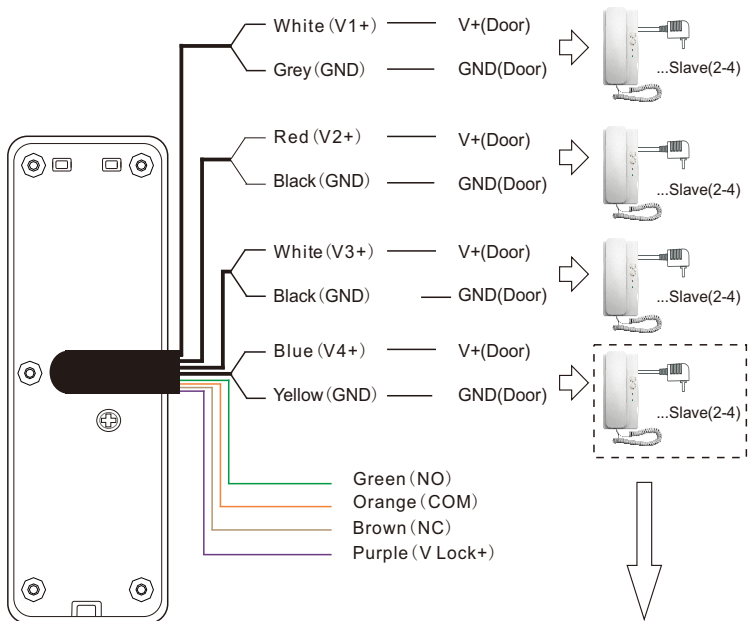


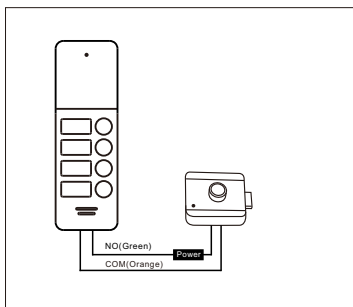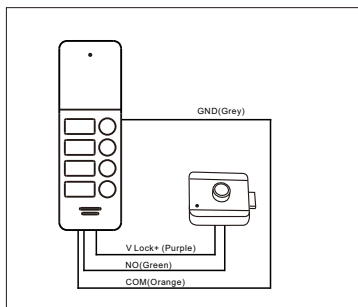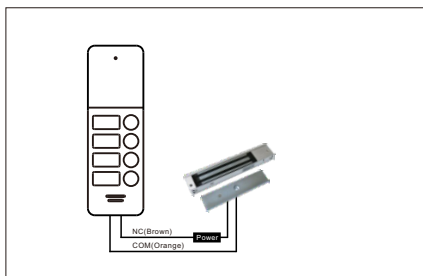


OUTDOOR UNITS PRODUCT SPECIFICATIONS

Power consumption	150mA max.
Power supplier	Supplied from indoor unit
Operation temp.	-40~+50°C
Installation	Surface/flush mount

OUTDOOR UNITS INSTALLATION DIAGRAM

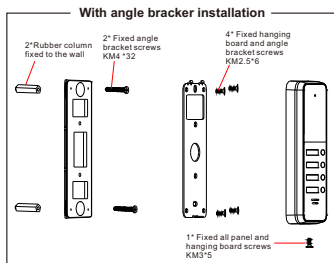

A


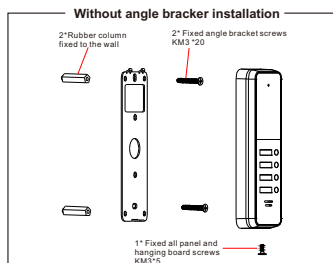


B

INSTALLATION PROCESS OF OUTDOOR UNITS



NOTE:

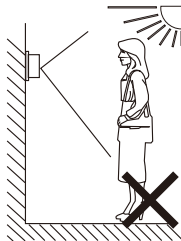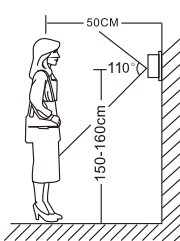

- Avoid installation of the device near strong radiation e.g. AC motor and lift .
- Maintenance should be complied with qualified technician .
- Avoid hard shake , beating and collision ,otherwise the internal exact components maybe be damaged .
- Do not expose the outdoor camera under strong light or sunshine.
- Do not install the outdoor camera in the environment e.g. direct sunlight ,contact rain ,High temperature ,high humidity ,full of dust and chemistry corrosive.
- Select the most suitable position where the camera is located at user's eye level
- Switch off power supply before installation.
- Keep more than 30cm away from AC power supply to avoid external interference.
- Keep it away from the water and magnetic field.

