


VEIU

Smart Video Doorbell

Smart and Safe

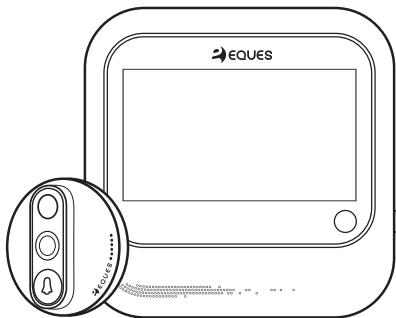

User Manual



01 | Package Contents



Bracket

1 piece



Outdoor Camera

1 piece



Indoor LCD Screen

1 piece



Charger

1 piece



USB Cable

1 piece





Bolts

3 pairs (6 peices)


02 | Component Diagram

Outdoor Camera


Indoor LCD Screen

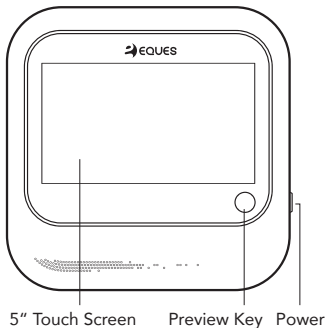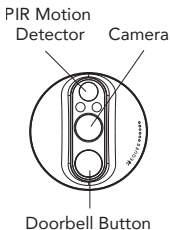

Under the Power key, there is a system reset key which default status is "ON". If system is crashed, turn the key to the position of "OFF" with a needle object then turn it back to "ON".

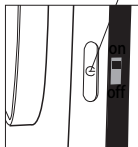

03 | Installation Diagram

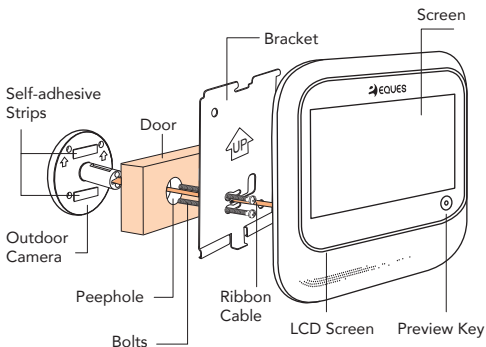

Install Device with 1 screwdriver within 5 minutes

Tips:

1. When fastening the outdoor camera, attach bolts into its poles first
2. When fastening the LCD Screen, align it to the notch of the bracket, its magnet will attach to the bracket automatically.

04 | Installation



1. Select the bolts depending on the door thickness, then screw them to the outdoor camera.



2. Peel off the protective film from the adhesive strips.



3. Pass the ribbon cable through the door hole.

Tip: It will be easier to wrap the ribbon cable in a paper tube first then pass through.




4. Tighten the outdoor camera.




5. Pass the cable through the bracket indoor.

Notes: don't twist the ribbon cable.

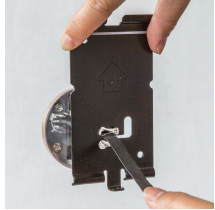


6. Attach the bolts through the bracket after lightly tugging up the ribbon cable.

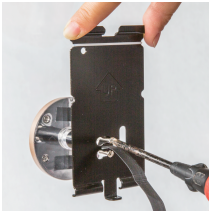

7. Align and screw the bolts to the bracket and fasten.



8. You may use a rubber band as pictured to secure the ribbon cable.

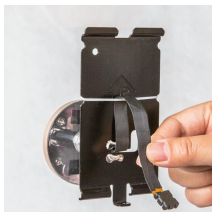

9. Pass the ribbon cable through the rubber band as pictured, then plug it onto the back of the LCD monitor.



10. Slightly press the cable head into the port as pictured.



11. Suspend the LCD monitor on the bracket from top to bottom, its magnet will be attached automatically.



12. Press the Power key for 5 seconds to turn on/off your doorbell.

05 | Register and Add Your Device

5.1 | Download App

Scan QR code to download the app, or search **"Eques"** on App store/Google play.



IOS



Android


5.2 | Start App

After installing the app, click




to start it.

5.3 | Register, Login and Add Devices

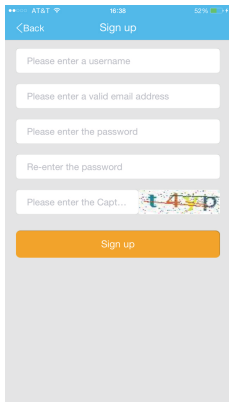


The screenshot shows a mobile app interface for signing up. At the top, there's a blue header with a back arrow and the text "Sign up". Below the header, there are five input fields with placeholder text: "Please enter a username", "Please enter a valid email address", "Please enter the password", "Re-enter the password", and "Please enter the Capt...". To the right of the last field is a CAPTCHA image showing the number "49p". At the bottom, there is an orange button labeled "Sign up".

Fill the information as pictured then click **"register"**. After completed, use this account to login. Make sure you remember your login info.

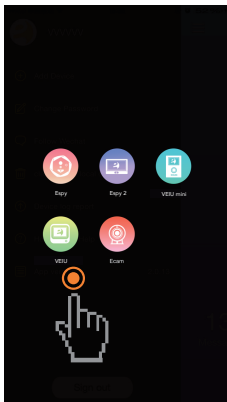


In the "Device Manager" panel, click **"+"** to add a new device. Choose the device above as pictured.

5.4 | Input WiFi Information, Scan QR Code

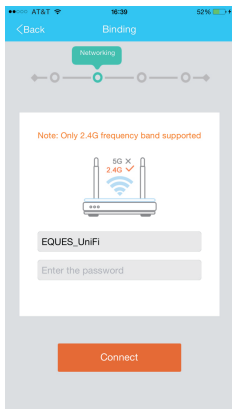


Input WiFi name and password as per UI prompt then click "Start Binding". (Notes: the UI will prompt to enter the menu of searching QR code.)

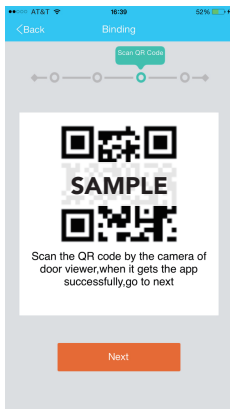


Click "Prepare Scan" on the previous step then generate a QR code, use the outdoor camera to scan this code. If you don't know how to scan, you can click "Have a problem scanning QR Code?" on the previous step.

5.5 | Bind Device and Preview

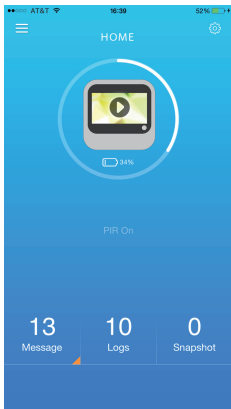


After binding your door viewer with the app, use the play button on your smartphone to enjoy the device.

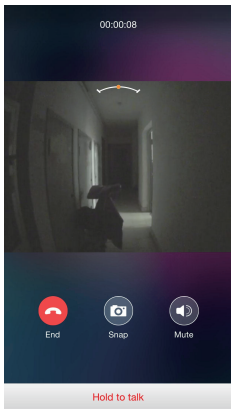

You can swipe around the screen for more details when viewing your real-time video or you can hold your smartphone in landscape orientation for a full view.

06 | Applicable Door Thickness

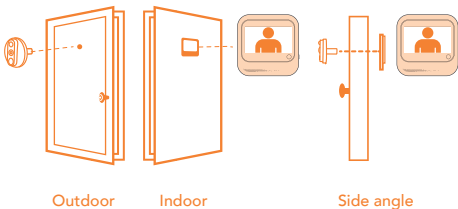

Applicable door thickness: 1.4in - 4.3in (35mm ~ 110 mm)

Applicable peephole: 0.6in - 2.2in (14mm ~ 50mm)

When choosing bolts to install the outdoor camera, you must know your door's thickness.

Notes:

For the door thickness between 1.4in - 2.6in (35mm ~ 65mm), choose 1.4in (35mm) short bolts;

For the door thickness between 2.6in - 3.7in (65mm ~ 95mm), choose 2.6in (65mm) long bolts;

For the door thickness above 3.7in (95mm), use your own M3 bolts around 3.2in (80mm).

07 | Safety Guideline



- Try to avoid placing the device in high-temperature, high humidity, dusty or other harsh environments as this may reduce its lifespan.
- Don't forcibly squeeze the camera lens and the black ball on the top of the outdoor subcomponent; otherwise it can cause hardware damage.
- Treat the ribbon cable with care during installation, don't forcibly drag, scrape or cut the ribbon cable. (The device will be out of warranty if it is damaged by inappropriate installation.)
- Make sure you use the charger that is included in the package. Unqualified chargers might cause damage to the device.

| CONTACT PAGE

CUSTOMER SERVICE EMAIL:

cs@equeshome.com

ADDRESS:

2100 Geng Road, Suite 210,
Palo Alto, CA 94303, USA

WEBSITE:

www.equeshome.com